

DEPRESSED CURB

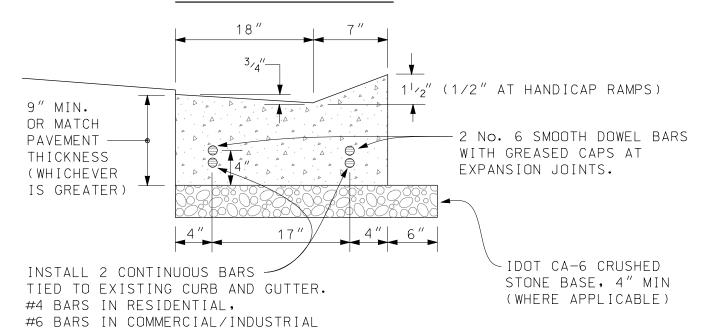

B6.18 CURB & GUTTER

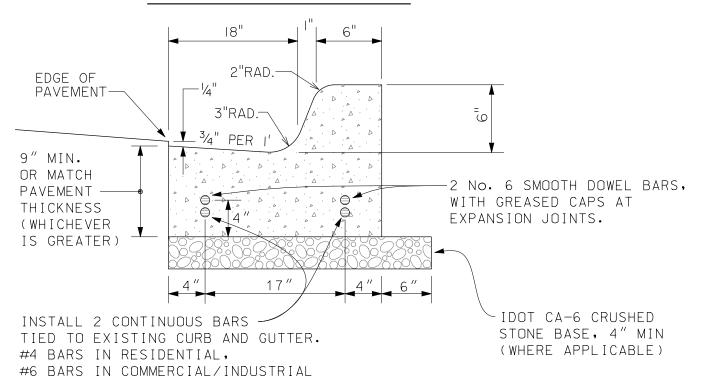

NOTES:

- 1. CONTRACTION JOINTS SHALL BE PLACED AT 15' INTERVALS, AND SHALL BE FORMED BY SAW CUTTING TO A DEPTH OF AT LEAST TWO INCHES.
- 2. EXPANSION JOINTS SHALL BE PLACED AT 60' (MAX) INTERVALS, AT ALL POINTS OF CURVATURE, AND AT THE END OF EACH POUR.

